



Ronis Tronic Keypad Lock datasheet

Extent of Range

Flexiform code: SPT



Delivery

Pre-installed on the locker storage units.

Product Warranty

1 year as standard. T&C's apply, please contact Flexiform for more information.

Product Certification

Ingress Protection Rating: IP45

Dimensions

Width: 123mm, height: 114mm, depth: 26mm. Front fascia: 59mm x 84mm

Finishes



Black.

Features

Type: Keypad lock, 4 digit user code & 5 digit master code.

Mode: Public Mode aka Multi-user mode. Used on a locker that is not assigned to an individual. Anyone can use an un-occupied locker using their own 4 digit code. Once the person has finished using the locker it remains 'open' so that the next person can use their own 4 digit code.

Anti Corrosion Protection: No

Stand-alone Functionality: Yes

Battery Lifetime Cycles: Up to 70000 cycles. 4x AA batteries. Visual battery low warning alarm. Batteries are installed upon locker arrival, it is the responsibility of the Client to maintain the battery over the product life span.

Acoustic Signaling: Yes

Optical Signaling: Yes

Programming Methods: Keypad, Software, USB Key

Emergency Power Supply: Yes

Preservation of Data after Power Loss: 5 years

Maximum Operating/ Storing Temperature: 70 celsius

Maximum Relative Humidity: 90%

Minimum Operating Temperature: -5

Operating Instructions

To Open

Open and close with 4-digit code and press the arrow 'enter' key. The code is erased every time the lock is opened, making it available for a new use.

Change the User code

1. Press Enter for 3 seconds.
2. Input Current code and press enter.
3. Input New code and press enter.

Open using Master code

Inspection Mode

1. Input the 5 digit Master code and press enter.
2. Close the lock by pressing enter within 30s. The User code is not deleted.

Delete User Mode

1. Input Master code and press enter.
2. After 30s the lock stays open.
3. The User code has been deleted and a new User code will be required to close the lock again.

Or alternatively use the master key (instructions overleaf)

Operating Instructions Continued

Change the Master code

1. Press Enter for 3 seconds.
2. Input Current master code and press Enter.
3. Input New master code and press Enter.

Open using electronic Master Key

Inspection Mode

1. Connect the Master key (BLUE)
2. Lock opens
3. Remove electronic key
4. Press enter within 30 seconds
5. User code is not deleted

Delete User Code

1. Connect the Master key (BLUE)
2. Lock opens
3. Remove electronic key
4. After 30 seconds the User code will be deleted
5. A new User code will be required to close the lock again.

Operating Instructions Continued

Programmable settings.

Management software and cable required (Optional)

Automatic Opening Time

The lock will open automatically at the programmed time:

- hh : mm
- Mon, Tue, Wed, Thu, Fri, Sat, Sun
- Working days
- Two options:
 1. Leave door open
 2. Close door again

Acoustic Signal Volume

- High/Low/Off

LED Indication off closed position.

- On/Off blinking red LED when locker is closed

Codes

- User / Master

Last Events

Battery Level

Number of Operations


How to change Programmable Settings

1. Load settings from the computer to the settings key (BLACK).
2. Connect settings key to the lock.
3. The settings will be automatically transferred to the lock.

Battery Replacement

Unscrew the T20 Torx security.

The battery replacement must be completed in less than 5 minutes. The battery pack must remain connected during battery removal or the programmed time will be lost.

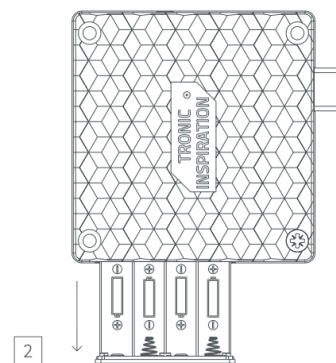

2