 




## Mini Digital Combination Lock datasheet

Extent of Range  
Flexiform code: R



Delivery  
Pre-installed on the locker storage units.

Warranty  
1 year as standard. T&C's apply, please contact Flexiform for more information.

Product Certification  
Meets IP55 rating.

Dimensions  
Height: 95mm. Width: 30mm

Finishes



Black only.

### Features

Type: Keypad digital lock.  
Keypad: Numbers 0-9 with # and \* key.  
Orientation: Vertical.  
Master Key: Master key for emergency opening.  
Punch Hole: Rector fit existing punch hole (19x16.1mm mechanical lock).  
Battery: 1\*CR2450 battery.

Mode: Public multi-user setting as standard. Public Mode aka Multi-user mode. Used on a locker that is not assigned to an individual. Anyone can use an un-occupied locker using their own 4 digit code. Once the person has finished using the locker it remains 'open' so that the next person can use their own 4 digit code.

Option to change the lock to a Private Mode aka Single-user mode by the Client. Used on a locker that is assigned to an individual. Only the user of this locker will know the 4 digit code for this lock, so it cannot be used by anyone else.

### Operating Instructions

The lock has three code levels that allow you to perform the following actions:  
- Master code(8 digit code).  
- Sub-master code(8 digit code).  
- User code(4 digit code).

#### Private Mode

To set to Private Mode:  
\* -- Master code - #-07--#.  
Example: \* - 00000000 - #-07--#

The lock will revert back to default Private Mode, factory set user code 1111 will now work until reprogrammed.

#### To set to Public Mode:

\* -- Master code - #-06--#  
The lock will now remain open until next user enters their own code into the lock as follow:

Step 1: enter new user code --Close the locker which will now be locked  
Step 2: enter user code-- The lock will now remain open until next 4 digit code is entered.

flexiform

---

## Operating Instructions Continued

### Master Code Functions:

#### Open: Enter Master Code.

The user code will be deleted when using master code when the lock is in public mode.

#### Programming Master Code.

Press \*--current master code --#--01--#-- new master code - #--new master code--#.

Example: \*--00000000--#--12345678--#--12345678--#. Result: Master code has been changed to 12345678

#### Set or change the Sub-Master Code.

Press \*-- master code--#--04--#--new sub-master code--#.

#### Delete Sub-Master Code.

Press \*--Master code--#--05--#.

#### Set or change the User Code

##### (Private Mode Only).

Press \* -- master code - -#- -02--- new user code - #-02---#.

Example: \*--00000000--#-02 -1234--#-02--#

Result: New user code 1234 now operative.

#### Delete User Code (Private Mode Only).

Press \*--Master code--#--03-- #.

#### Set or change the Technician Code

##### (Public Mode Only).

Press\*--Master code--#--08--#--new technician code--#. Note: the technician code must be 6 digit code.

#### Delete the Technician Code

##### (Public Mode Only).

Press \*--Master code--#--09--#.

#### Activate/Deactivate the Auto-unlock

##### Function (Public Mode Only).

Activate: Press \*--Master code--#--11--#

Deactivate: Press\*--Master code--#--12--#.

## Operating Instructions Continued

### Set Auto-open time (Public Mode Only).

Press \*--Master code--#--10--#--XX--#

Example: Press\*--00000000#--10#-02#, the door unlock in 2 hours later.

Note: until the door locked, the lock begins to count and unlock 2 two hours later and the "xx" is from 01 to 12.

---

## Sub-Master Code Functions:

### Open.

Enter sub-master code.

(The user code will be deleted when using sub-master code when the lock is in public mode).

#### Change the Sub-master Code.

Press \*--current sub-master code --- # --- 04--#--new sub-master code --- #.

#### Set/Change the User Code (Private Mode Only).

Press--\*--current sub-master code ---#--02--#-- new user code --- #.

---

## Operating Instructions Continued

### User Code Function: Private Mode

#### Open.

Enter user code.

#### Change the User Code.

Press \*-- current user code --#--new user code--#.

### User Code Function: Public Mode

#### Set code.

Enter any 4 digit code.

#### Open.

Enter user code.

Note: The 4 digit code is one time valid only. The door keep open until another one set a new code.

#### Initialize

\* ---99--#-Press the reset button by a clip/pin from back hole Lock resets to default settings.

