

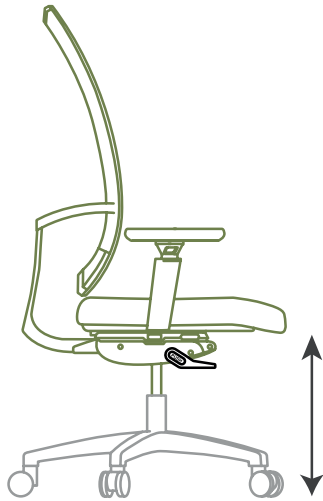


Equity

Task Controls

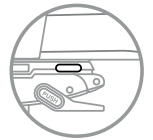

PULL UP

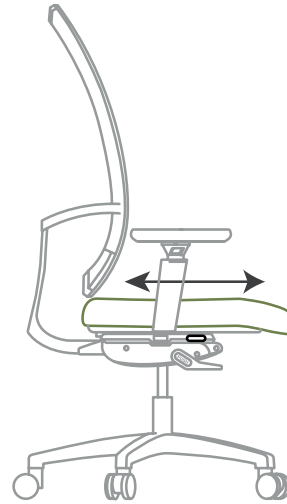

PUSH

Seat Height

Control Location: Right hand side of the chair

To adjust the height of the chair, pull the control upwards and release when at the desired height. If the user is sitting on the chair, the seat will go down. Remove the weight from the seat to adjust the seat up.


Seat Depth (Optional)

Control Location: Right hand side of the chair

To adjust the seat depth of the chair, push the control inwards and slide the seat forwards or backwards. Release when at the desired depth.



PUSH

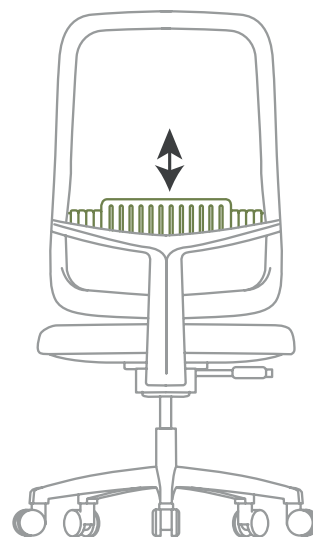

Back Lock

Control Location: Right hand side of the chair
(The button is set within the seat height control.)

To activate the back lock, ensure that the control button is inactivated. Push on the back support to release the lock, set to the desired position and then push in the control to fix into place.

Lumbar Support (Mesh Back Chairs Only)

Control Location: Back of the chair

To adjust the lumbar support, use both hands and reach around the back of the chair. Pull up or push down the lumbar bar until at the desired position.

Equity

Task Controls



PULL UP

Armrest Height

Control Location: Outside of arms


To adjust the arm height up or down, pull the control upwards and release when at the desired height.



Armrest Slide (Optional)

Control Location: Arm pads

To adjust the armrests forwards and backwards, simply slide the top of the arm pads. This is best done while the user is sitting in the chair.

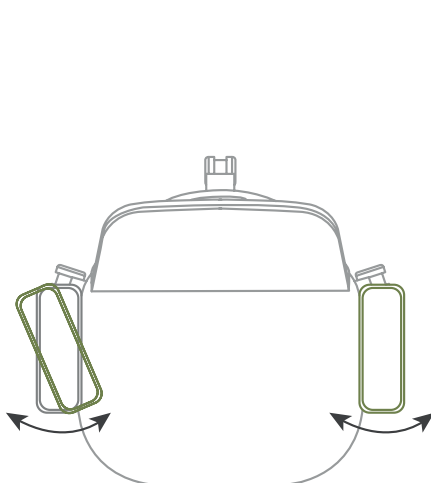

PUSH

Armrest Rotation (Optional)

Control Location: Inside of arms

To rotate the armrests, simply press and hold in the control until at the desired position. The arm pads have 3 preset positions that will lock in place; straight, inwards, and outwards facing. Additional rotation is also available.